

FUSES

Fuse Block 1

This block is connected to the chassis battery, and is "hot" when the ignition key is on.

1	25 Amp	Fan Relay
2	15	Cruise Control Light
3	15	Dash Gauges, Back-up Lights, CD Player, "CAT" Reader
4	10	Leveler Controls
5	30	Dash A/C Slow-Speed Fan
6	10	Pac Brake
7	20	Windshield Wipers
8	5	Windshield Wiper Washer, Remote Mirror Switch Light
9	15	Air Horn Pump, Entry Step Controls

Fuse Block 2

This set of circuits runs off the chassis battery, but is always "hot". These items work regardless of whether the ignition is on.

10	15 Amp	Parking, Clearance, Marker, and A/C Panel Light, Delco Lights, Shifter, Cat ID
11	20	Emergency Flasher
12	15	Air Horn Relay/Pump
13	10	AM/FM Radio and CD Player (memory)
14	10	Cab Map Lights
15	10	Dash Switch Lights
16	5	Chassis Solar Panel
17	5	CB Radio, Stereo Clock
18	10	Gauge Lights, Headlight Relay

Fuse Block 3

This set of circuits operates directly off of the house batteries. These circuits are "hot" regardless of the ignition key.

19	5 Amp	Battery Boost Solenoid
20	15	Cargo Bay Lights
21	30	Entry Step
22	5	Rear Camera
23	5	Dash Fans
24	10	Mirror Heaters
25	25	Fog Lights
26	15	Cigarette Lighter
27	20	Docking Lights